

ChefsTemp^o

CHEFSTEPM 4-IN-1 PROBE CHARGER

USER MANUAL



Fast
Charging



Charges Up
to Four Probes



Type-C Cable
Compatible



Compact and
Space-Saving

QUICK PROBE CHARGING FOR PERFECT COOKING


ChefsTemp 4-in-1 Probe Charger

Overview:


The ChefsTemp 4-in-1 Probe Charger is designed to keep your ChefsTemp wireless probes charged and ready for use. Simply connect it to a 5V2A power adapter and a Type-C charging cable (adapter and cable are not included) for effortless charging. The ChefsTemp 4-in-1 Probe Charger can accommodate up to four probes simultaneously, compact and convenient, ensuring you're always prepared for your next grilling or cooking session.

Operation:

Connect the Charger and place the probe according to the picture below.

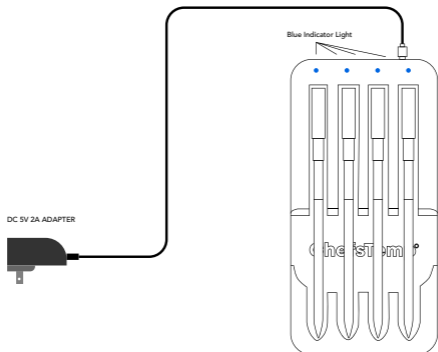

When the Charger is successfully connected, the red indicator light next to the Typc-C socket will light up.

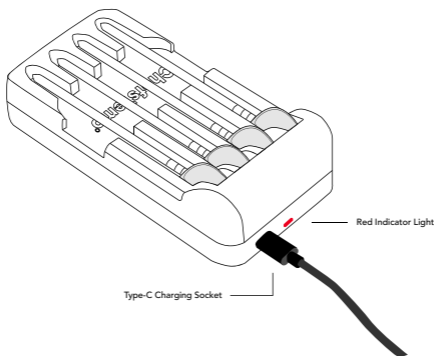

When the probe is charging, the blue indicator light above the probe will light up. Generally, a probe without power will be fully charged after 10-15 minutes. When the probe is fully charged, the blue indicator light will turn off.

Please note that the Charger cannot charge the probe independently and must be used when connected to a power source.

If there is a short circuit in the charging case, charging will immediately stop, and all four blue indicator lights will flash. Please reconnect the charging cable and reinsert the probe to resume charging.

Support:

If you have any issues with your device, please feel free to contact us:

Tel: +1(559)563-8838

E-mail: info@chefstemp.com

Website: www.chefstemp.com

ChefsTemp^o